



Samsung Blast Motherboard Replacement

This guide will demonstrate how to replace the motherboard of a Samsung Blast.

Written By: Paige Weinstein





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Motherboard



- Remove battery cover by pushing up on the top half of the battery cover./**Remove the back of the cellular phone by pushing up on the top half to expose the battery.**

Step 2



- Remove battery/**Remove the battery out of the phone.**

Step 3



- Use Phillips #00 screwdriver to unscrew the six SMALL screws that secure the back of the case/**Zoom in on this picture for a better view of the screws.**

ⓘ Note: The top two screws (one on either side of the case) are secured in the back cover. You cannot completely remove them, however you need to loosen them enough to take the back cover off/**Make this note a different color.**

Step 4




- Remove back cover/**Remove the back cover of the cellular phone.**

Step 5




- Remove the buttons for the camera and volume/**Zoom into the picture for a better view.**

Step 6

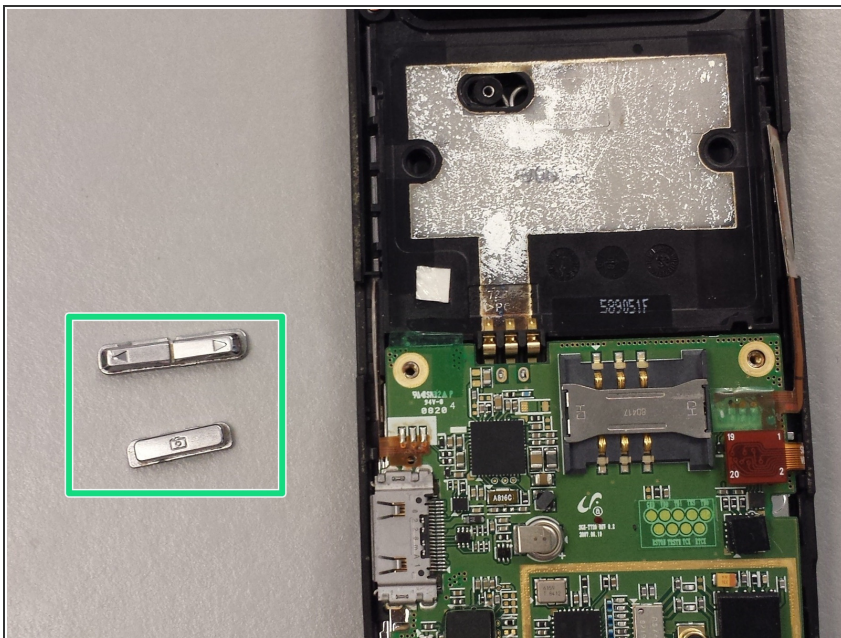



- Set aside the volume and camera buttons/**Place the volume and the camera buttons aside.**

Step 7

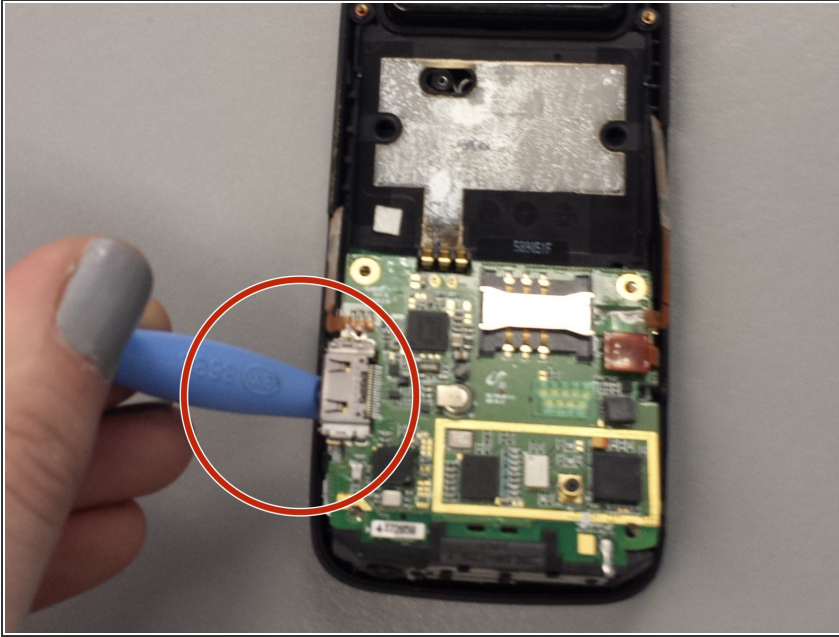


- Use smaller iPod opening tool to pry motherboard from main body/**Use a prying tool to pry the motherboard from the main body of the cellular phone/Maybe use a different tool for this step. Not everyone will know what this tool is.**

Step 8

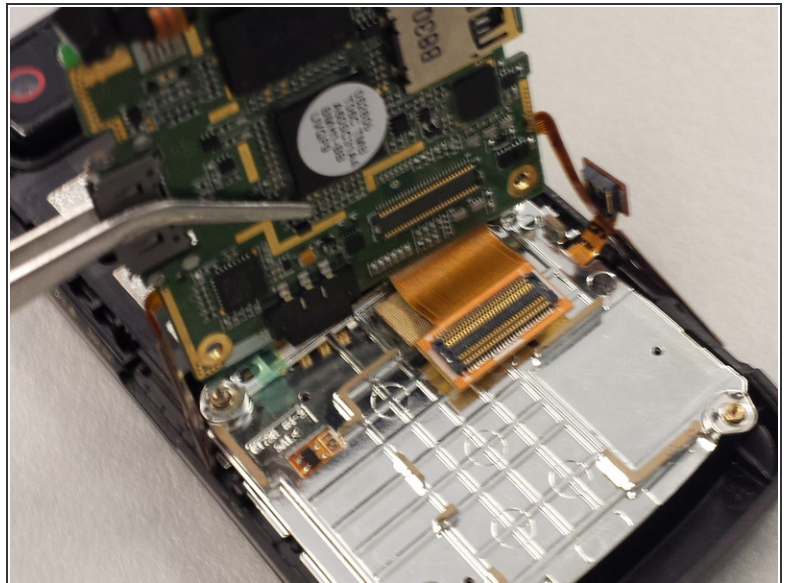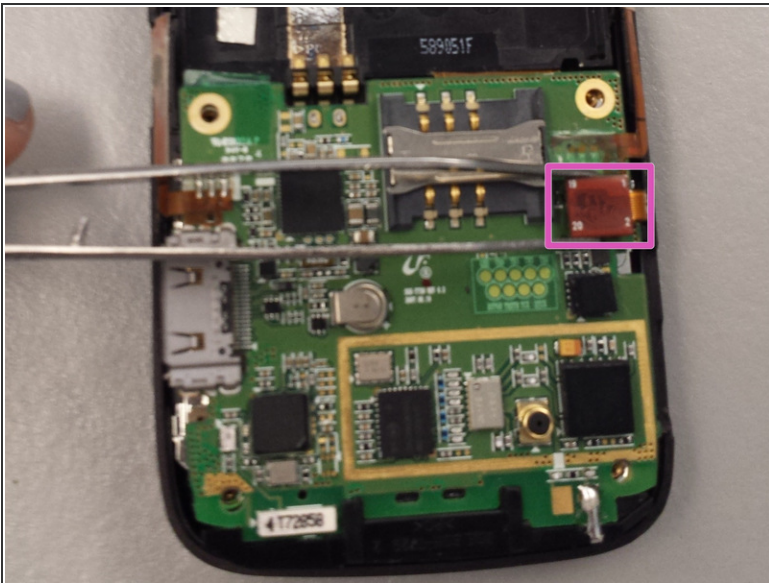

- Carefully grab the motherboard with tweezers then unsnap motherboard from the two connecting plates/**Get a close up of this picture .**

Step 9

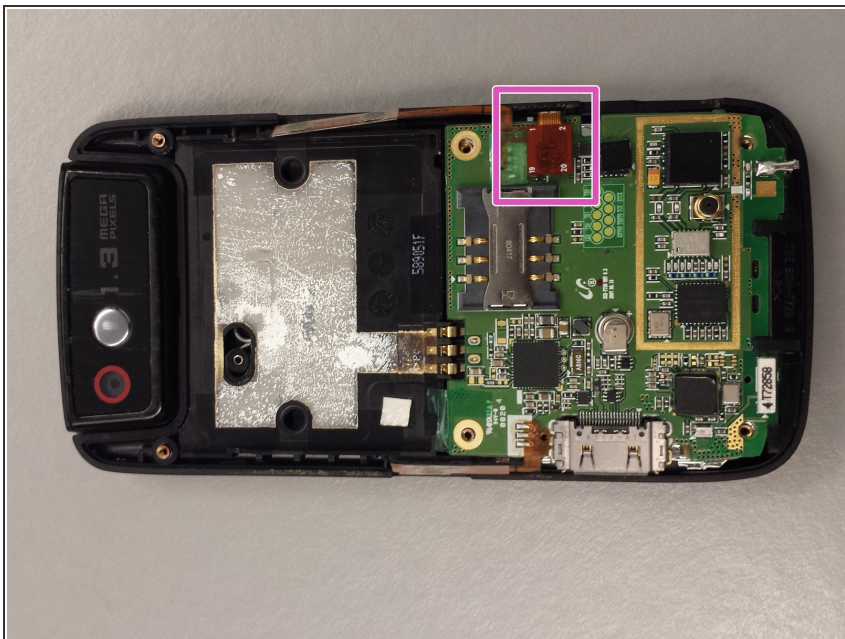

- Snap new motherboard back into place/ **Make this picture a close up by zooming in.**

Step 10



- Reverse the steps to resassemble/**no edits necessary.**

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 02:27:35 PM.

